



COZYMATIC

Installation manual



Ⓐ x8



Ⓒ x4



Ⓔ x1



Ⓖ x8



Ⓑ x4



Ⓓ x4



Ⓕ x8



Ⓕ x1



