




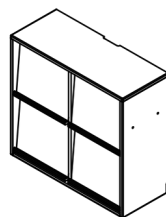

Arlo Modular Storage (Type A)

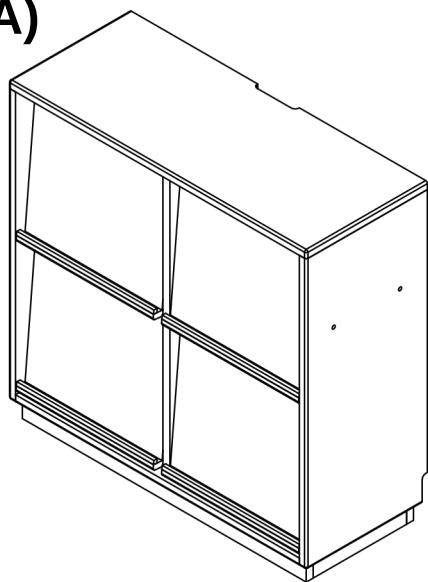

1

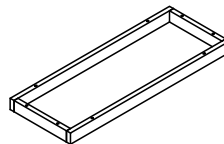

2



3



4



5



6



7



8



9

List

1 Cabinet*1

2 Base*1

3 Knocking screw*4

4 M6*30 screw*8

5 M6 flat washer*8

6 M6 flat washer*8

7 Z-type buckle*2

8 Self-tapping
screw*4

9 M4 wrench*1

Installation


- Installation Difficulty: Medium
- Number of People Needed: 2
- Estimated Time: 60 minutes
- Other Tools Needed: Screwdriver

Installation
Steps



Step 1

- 1 Before installation, please place packaging cartons or cushioning materials on the ground to avoid damage to the goods and the floor.
- 2 Installing the optional base

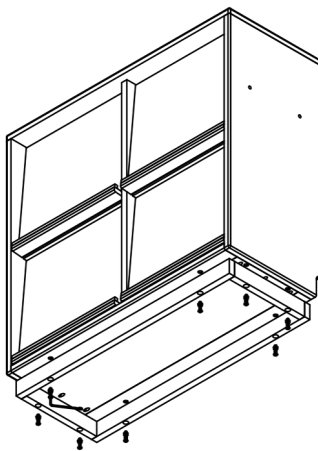


⊙ ⊙ ⊙ M6*30 bolt×8

└─ M4 wrench × 1


Step 2

- 1 Install the knocking screws for side-by-side cabinets.

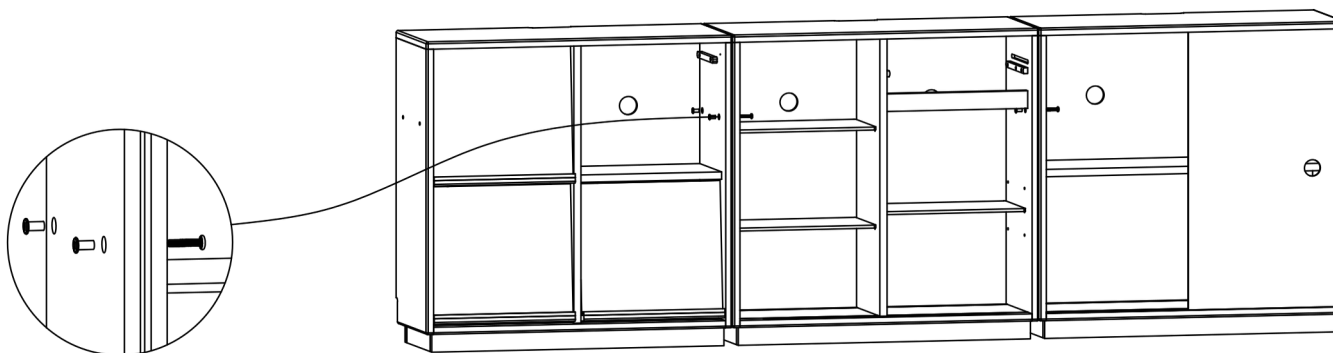

Step 3



- ① Install the Z-shaped clip in upper and lower cabinet mode.

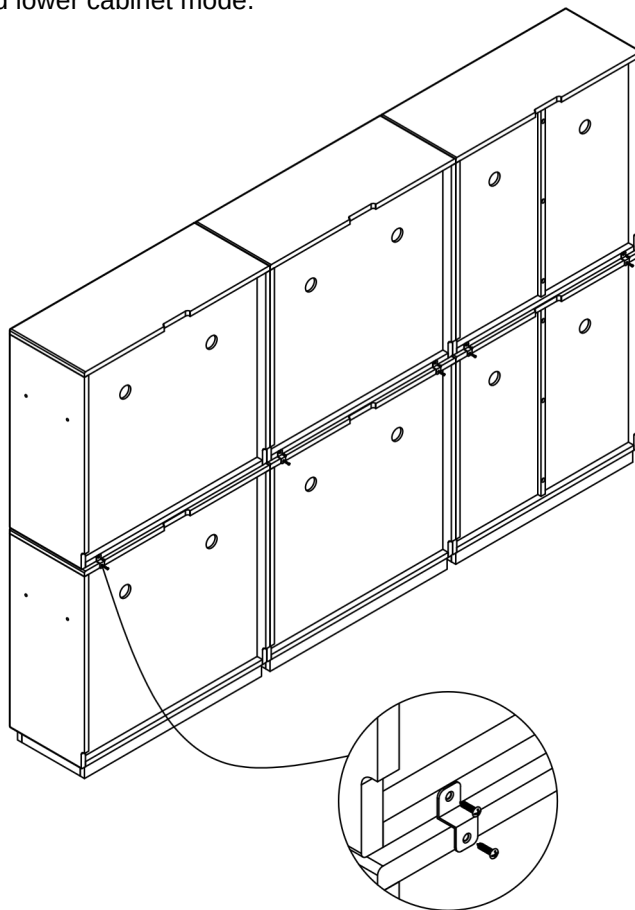


COZYMATIC



Arlo Modular Storage (Type B)

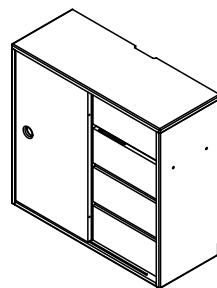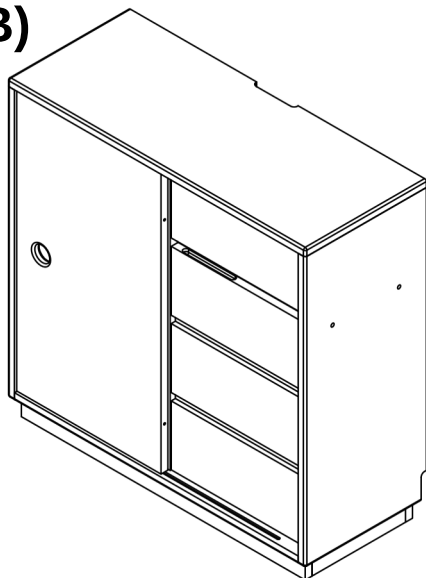

1

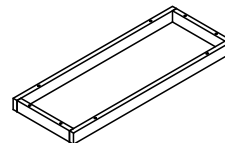

2



3



4



5



6



7



8



9

List

- | | | |
|-------------------|------------------------|--------------------|
| 1 Cabinet*1 | 2 Base*1 | 3 Knocking screw*4 |
| 4 M6*30 screw*8 | 5 M6 flat washer*8 | 6 M6 flat washer*8 |
| 7 Z-type buckle*2 | 8 Self-tapping screw*4 | 9 M4 wrench*1 |

Installation


- Installation Difficulty: Medium
- Number of People Needed: 2
- Estimated Time: 60 minutes
- Other Tools Needed: Screwdriver


Installation
Steps



Step 1

- 1 Before installation, please place packaging cartons or cushioning materials on the ground to avoid damage to the goods and the floor.
- 2 Installing the optional base

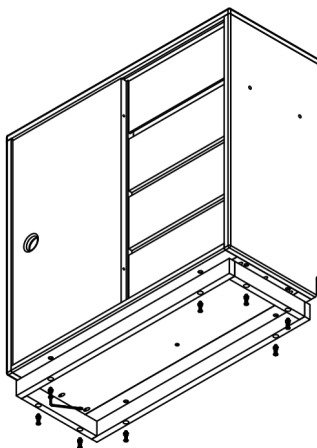


 M6*30 bolt×8

 M4 wrench × 1


Step 2

- 1 Install the knocking screws for side-by-side cabinets.

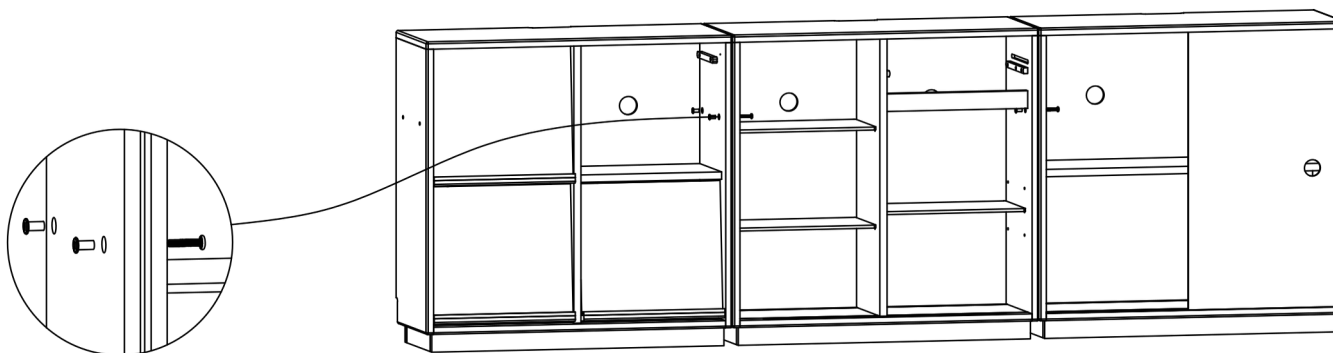

Step 3



- ① Install the Z-shaped clip in upper and lower cabinet mode.

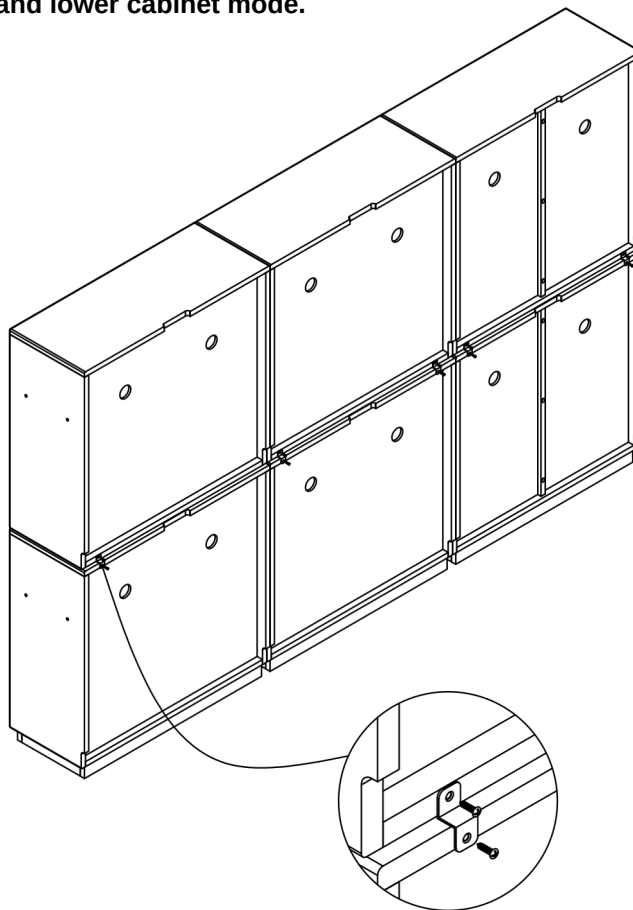


COZYMATIC



Arlo Modular Storage (Type C)

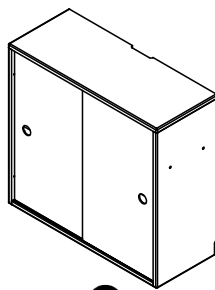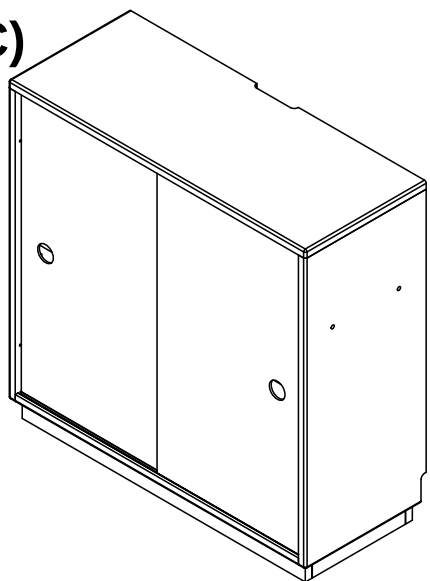

1

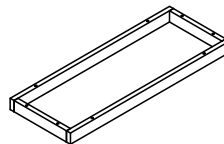

2



3



4



5



6



7



8



9

List

1 Cabinet*1

2 Base*1

3 Knocking screw*4

4 M6*30 screw*8

5 M6 flat washer*8

6 M6 flat washer*8

7 Z-type buckle*2

8 Self-tapping screw*4

9 M4 wrench*1

Installation


- Installation Difficulty: Medium
- Number of People Needed: 2
- Estimated Time: 60 minutes
- Other Tools Needed: Screwdriver

Installation
Steps



Step 1


- ① Before installation, please place packaging cartons or cushioning materials on the ground to avoid damage to the goods and the floor.
- ② Installing the optional base

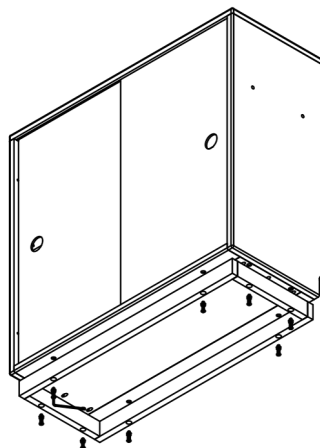

⊙ ⊙ ⊙ M6*30 bolt×8
└─ M4 wrench × 1


Step 2

- ① Install the knocking screws for side-by-side cabinets.

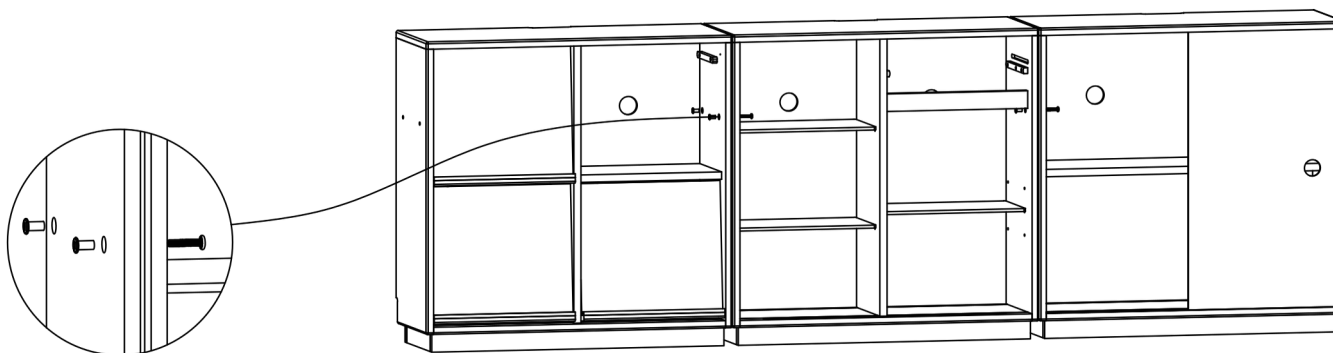

Step 3

- ① Install the Z-shaped clip in upper and lower cabinet mode.

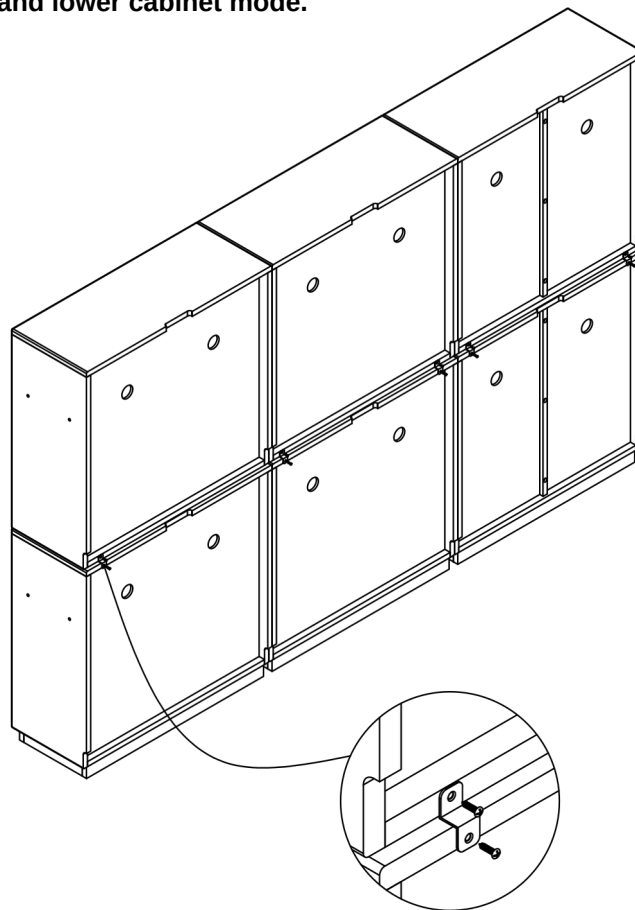

COZYMATIC