


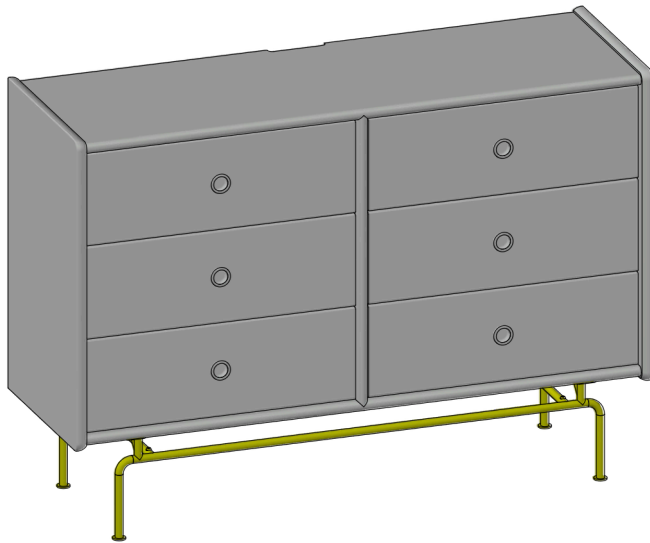

Hannah 6 Drawer Chest



List

1



× 8

2



× 8

3



× 1

4



× 1

5



× 4

6



× 1

1 m8*20 flat head screw

2 m6*7 round head screws

3 M5 hexagonal wrenches

4 M4 hexagonal wrenches

5 round foot pads 25

6 Anti-tip device

Installation

- Installation Difficulty: Easy
- Number of People Needed: 1
- Estimated Time: 10 minutes
- Other Tools Needed: No

Installation
Steps





Before installation, please lay a layer of packaging cartons or carpet on the ground as a buffer to avoid damage to the goods.

Step 1

Assemble the metal feet.

Insert the metal rod and tighten it with the m6*7 round head screw. Put the round foot pad on the bottom.

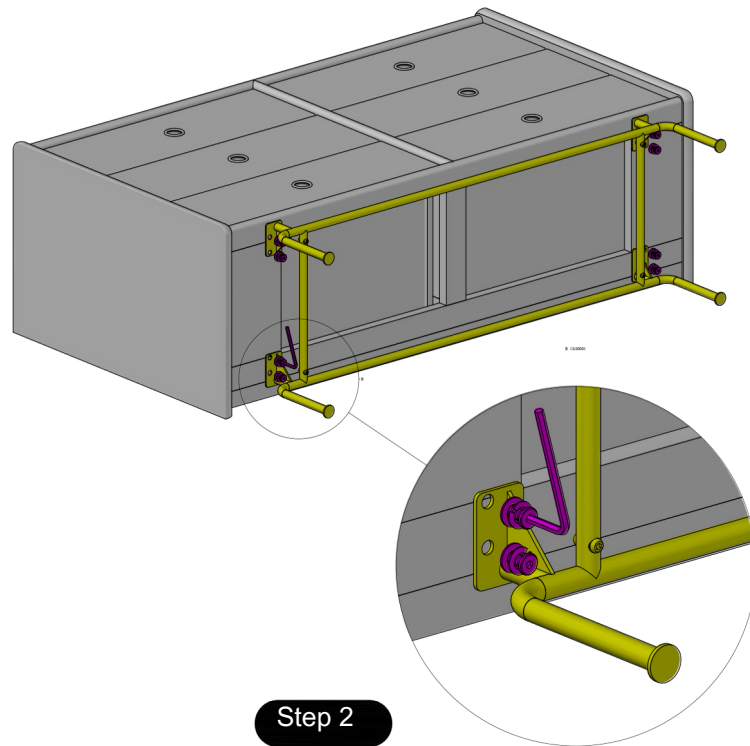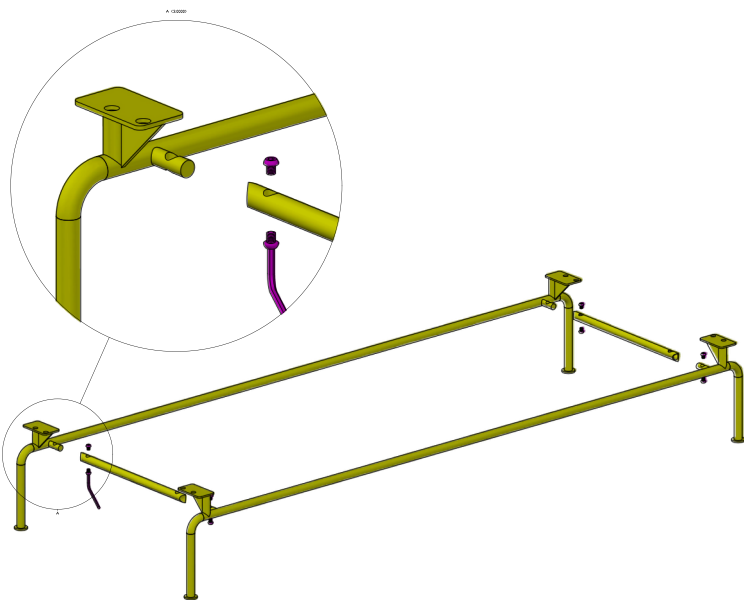

Step 2

Install the metal feet and fix them with M8*20 flat head screws. After the metal feet are installed, stand up the cabinet.

Installation Complete