


Aiden Coat Rack

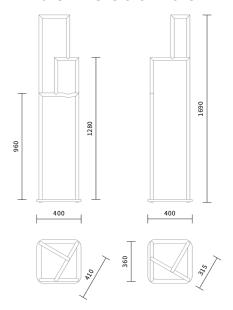

Installation


• Installation Difficulty: Medium

• Number of People Needed: 2


• Estimated Time: 10 minutes

· Other Tools Needed: No





Self-adhesive floor pads \times 4

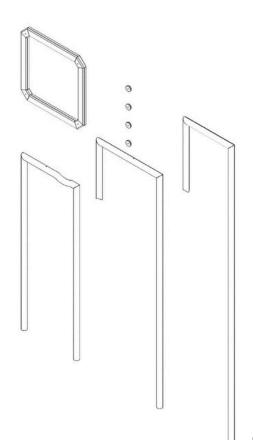

Installation Steps



Step 1


Use the included Allen wrench to secure the first-tier rack, base, and wooden foot pads together.


Hardware required: 2 long hex screws.


Step 2


Secure the second-tier rack, base, and wooden foot pads, then tighten the joint between the first-tier and second-tier racks.

Hardware required: 1 long hex screw + 1 short hex screw.

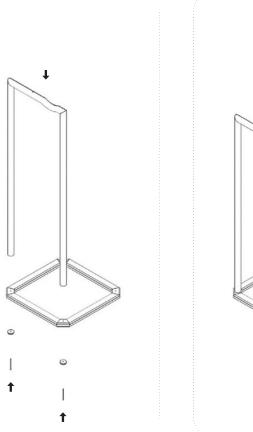

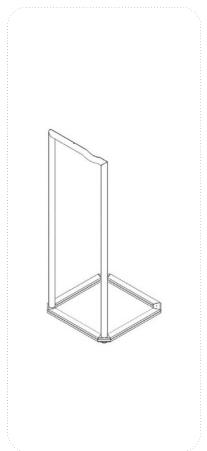

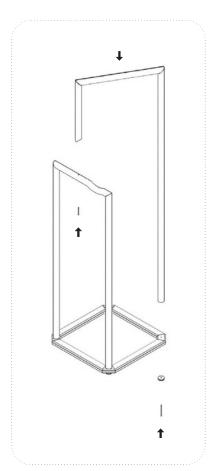

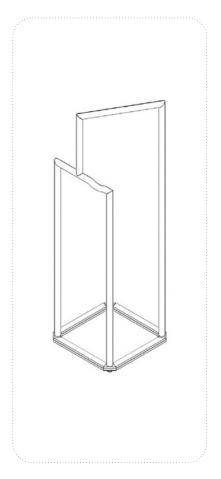

Secure the third-tier rack, base, and wooden foot pads, then tighten the joint between the second-tier and third-tier racks.

Hardware required: 1 long hex screw + 1 short hex screw.

Step 4

Peel and stick the self-adhesive floor pads firmly onto each of the four legs.

