


# Atlan Wood Bar Cart With Wheels

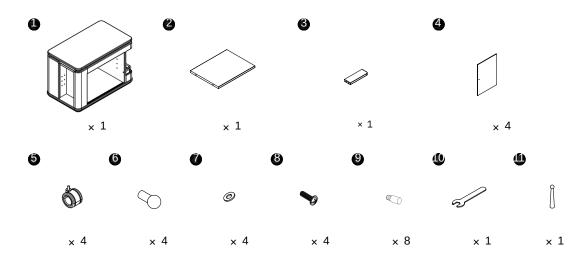



x 1(optional)

# List

- 1. Cabinet 2. Large movable partitions 3. Small movable partitions
- 4. Glass doors 5. Hollow universal wheel 6. Small light bulb handle
- 7. Silicone gasket 8. M4\*10 handle wire 9. Layer nails
- 10. Open-end wrench 11. Brass hook
- 12. Magnetic light strip (optional)

## **Installation**

• Installation Difficulty: Easy

• Number of People Needed: 1


· Estimated Time: 15 minutes

· Other Tools Needed: Screwdriver

Installation Steps →

#### Step 1

- Before installation, please place packaging cartons or cushioning materials on the ground to avoid damage to the goods and the floor.
- 2. Install the universal wheel: tip the cabinet over, screw the universal wheel into the corresponding hole, and tighten it with an open-end wrench.

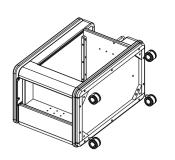




Hollow universal wheel x4



Open-end wrench x1

#### Step 3

- Install the glass door; use the handle wire to fix the small light bulb handle, and then insert the glass door diagonally into the glass groove.
- 2. Installation is complete.

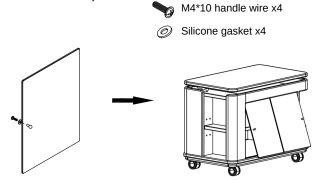

### Step 2

- 1. Install the movable shelf; screw the shelf nails into the appropriate holes and put the movable partitions on.
- 2. Install the brass hook; screw the brass hook into the corresponding hole shown in the figure.



1. Install the magnetic light strip; the magnetic light strip can be fixed in a suitable position.



