



# COZYMATIC

## Installation


- Installation Difficulty: Medium
- Number of People Needed: 2
- Estimated Time: 20 minutes
- Other Tools Needed: No

### Installation diagram

Product Number MPRCR-0723

Specification name **Mckibben Premium Rotating Coat Rack**

Note: (Installed) in the parts list and hardware list means it has been installed in the finished product and is not included in the hardware package

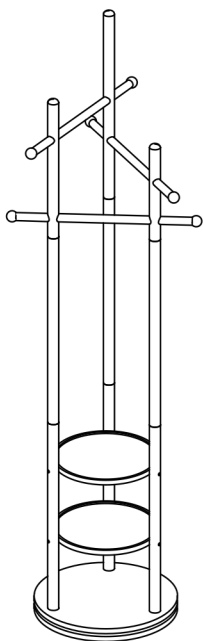

### Parts List

Num	Name	Diagram	Specification	QTY
A	A column-3 sections		Ø30*1712MM	1
B	B column-3 sections		Ø30*1592MM	1
C	C column-3 sections		Ø30*1492MM	1
D	Base		Ø390*38MM	1
E	Shelf		Ø290*15MM	2
F	Hanging rod		Ø22*263MM	3
G	Hanging handle		Ø30*120MM	6

### Hardware Watches

Num	name	Diagram	Specification	QTY
1	Hexagon socket screw		M8*30MM	3
2	Hexagon wrench		M5*57MM	1
3	Flat head quick teeth		Ø3.5*45MM	6
4	Non-woven pads		Ø20*3MM	4
5	Full-thread screw		M6*40MM	6

# Mckibben Premium Rotating Coat Rack


## Step 1

Note: It is not necessary to tighten the screws to the pillars.  
Because the next step is to screw the column, the hole position

First, lower the column (A1/B1/C1)

Use the L-type wrench (2) to tighten the hexagon socket screw (1) to the base (D).


Fix them together through the holes at the bottom of the base. Then rotate the base plate in turn to align the other two columns with it.

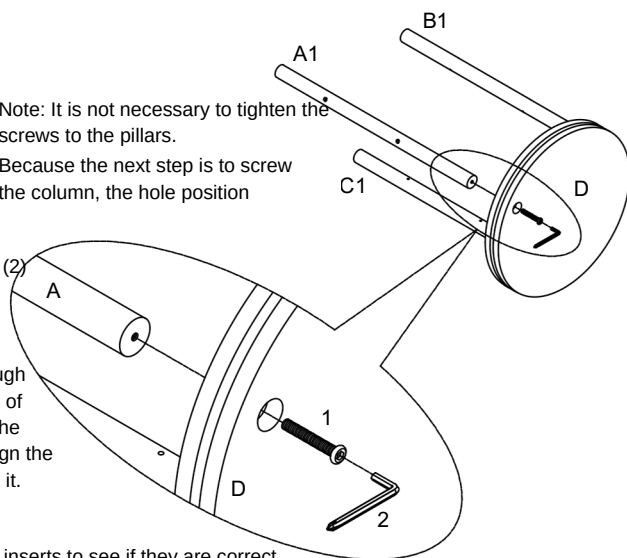

First check the package inserts to see if they are correct.


## Step 2

First, align the holes in the lower section of the (A1/B1/C1) column with the holes on the thickness side of the layer plate (E) as shown in the figure, and then fix them with self-tapping screws (3).

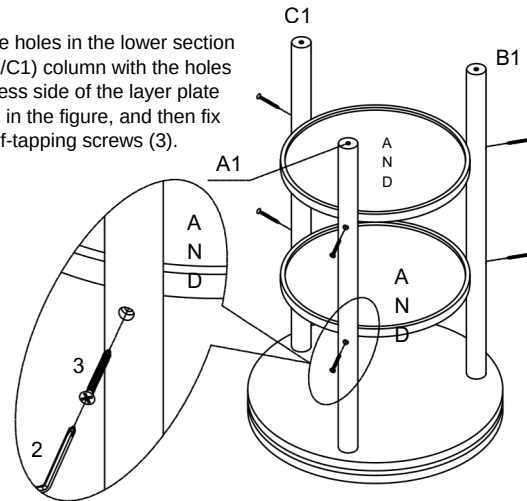

After assembly, tighten the screw at the bottom according to step 1


## Step 3

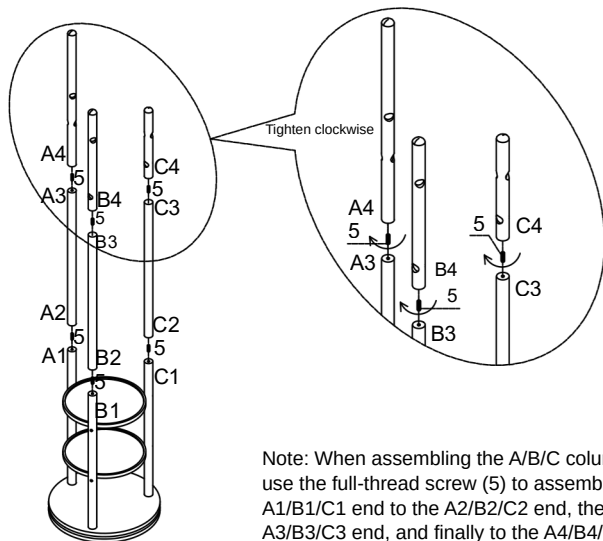

Note: When assembling the A/B/C columns, use the full-thread screw (5) to assemble the A1/B1/C1 end to the A2/B2/C2 end, then to the A3/B3/C3 end, and finally to the A4/B4/C4 end.

## Step 4

Note: Insert the three hanging rods F into the openings of the A/B/C columns, and then secure them with the hanging handles G.

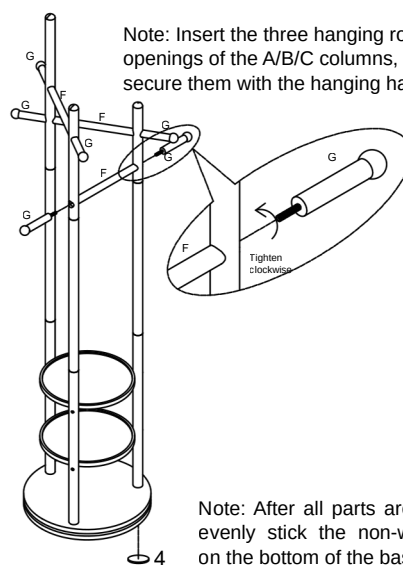

Note: After all parts are installed, evenly stick the non-woven pad on the bottom of the base plate.

Assembly completed

