




**COZY**MATIC

# **Mckibben Rotary Coat Rack**

Assembly Instructions

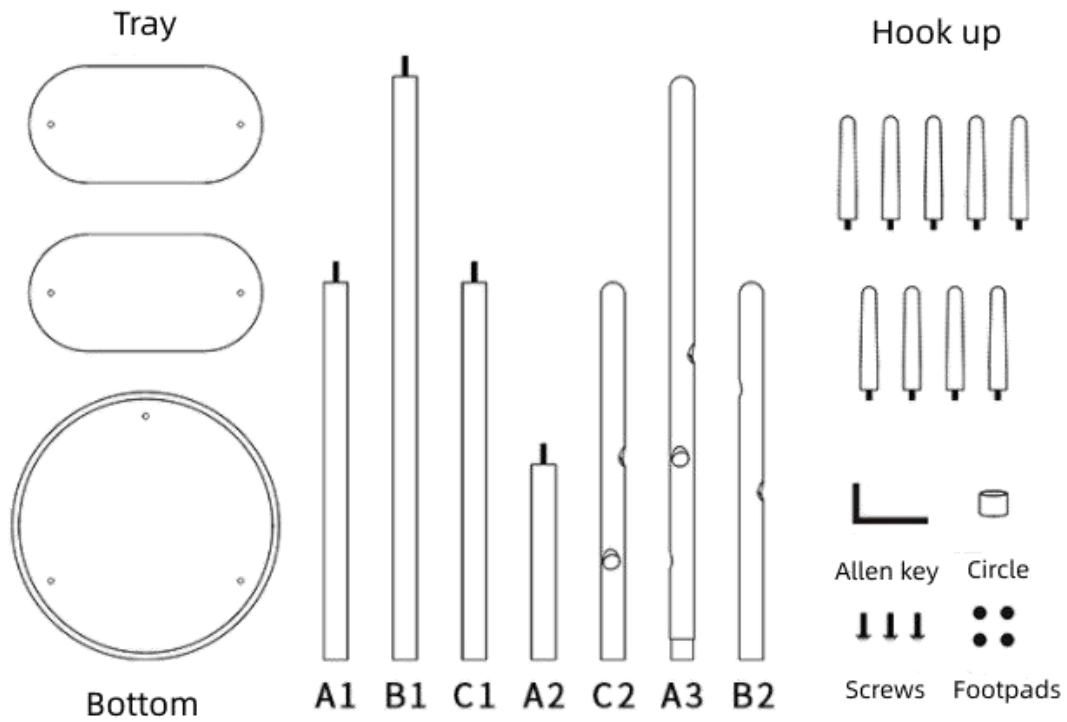

1 · Use a wrench to lock A1, B1, C1 on the chassis with screws

2 · Put the tray on the A1 main pole and the C1 main pole, lock the A2 main pole on the tray and connect with the A1 main pole, and lock the C2 main pole on the tray and connect with the C1 main pole

3 · Put the tray on the A1 main pole and the C1 main pole, lock the A2 main pole on the tray and connect with the A1 main pole, and lock the C2 main pole on the tray and connect with the C1 main pole

4 · Install 9 hooks and tighten all screws

5 · Install 4 anti-skid feet and finish

